


# Sunpak Burner Replacement

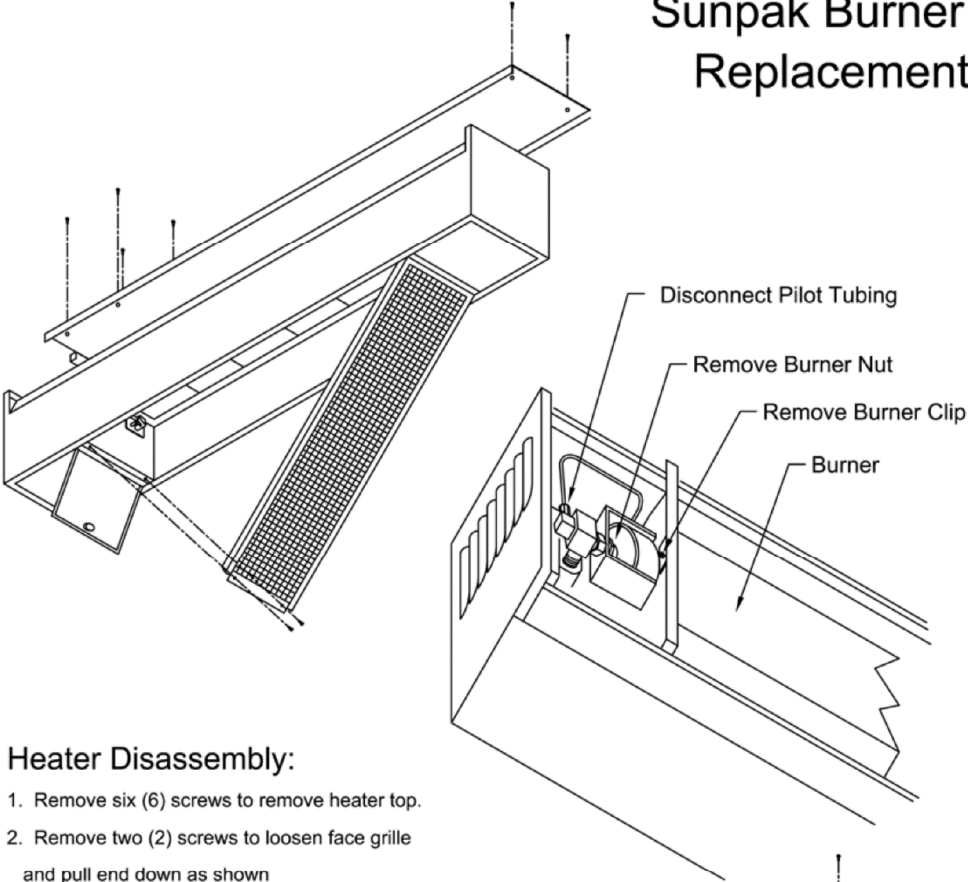

## Heater Disassembly:

- 1. Remove six (6) screws to remove heater top.
- 2. Remove two (2) screws to loosen face grille and pull end down as shown
- 3. Disconnect gas fitting from burner.
- 4. Remove burner clip
- 5. Remove two (2) screws from far end of burner
- 6. Carefully remove burner
- 7. Reverse process to install burner.
- 8. Run initial Start-up Procedure

